



1601 3rd Street South
St. Petersburg, Florida - USA
Toll Free: 1.877.809.4253
Tel: 1.727.490.3609
Fax: 1.727.490.3610
Email: info@fieldforensics.com
Web: www.fieldforensics.com



DABIT™ - DRUGS OF ABUSE IDENTIFICATION TESTS

Rugged | Long Shelf-Life | Extreme Storage Conditions | Simple-to-Use | Reliable



- DABIT™ Series: cocaine, opiates, crack, marijuana, general screening, LSD, methamphetamine, etc.
- Color-coded result - broad range of drugs identified
- Officer-friendly - improves ease of collection dramatically and color is easy to see against the white sample tip
- Clean & Simple
- Easy sample and residue collection
- Long shelf-life: 2 years under severe storage conditions
- Military version available

Dab or rub the suspect material or residue. Drop back into its tube and squeeze the tube. A color match indicates a positive. It couldn't be simpler. The officer-friendly DABIT™ can even be used on residue that would otherwise be almost impossible to collect if using another type of presumptive test kit - the user doesn't have to worry about gusts of wind either - DABIT™ holds the sample firmly in place until it can be tested.

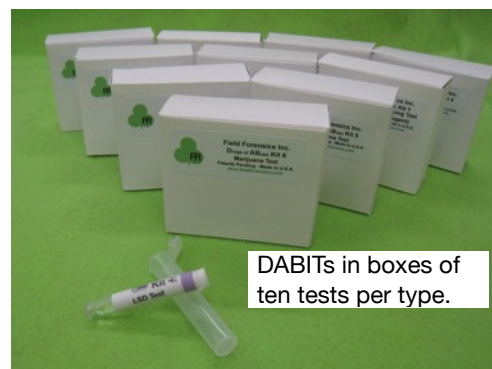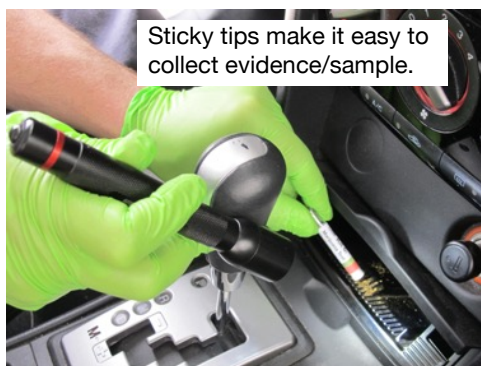

Our DABIT™ tests use chemicals (reagents) that comply with The National Institute of Justice, Standard—0605.00, Color Test Reagents/Kits for Preliminary Identification of Drugs of Abuse, developed by the Law Enforcement Standards Laboratory of the National Bureau of Standards.



Ask us about Fen-Her™ - the new heroin and fentanyl test kit

DABIT™ Series Made in USA - Patents Pending
Copyright 2017 Field Forensics, Inc.



FFI Colorimetric Test Kits



DRUG TESTED	CHEMICAL* (REAGENT)	TEST DESCRIPTION	DABIT™ MODEL
General Screening	Marquis	Presumptive identification of opiates (morphine, codeine or heroin), black tar, amphetamine-type compounds including meth. & MDMA (ecstasy), amphetamines and other drugs. Includes neutralizer.	DABIT-001-BX
Special Opiates	Mecke	Presumptive identification of heroin and other opiates. Includes neutralizer.	DABIT-002-BX
Amphetamines/ Methadone	Mandelin	Presumptive identification of amphetamines/ methadone. Includes neutralizer.	DABIT-003-BX
LSD	p-DMAB*	Presumptive identification of LSD * (para-Dimethylaminobenzaldehyde)	DABIT-004-BX
Cocaine	Cobalt Thiocyanate	Presumptive identification of cocaine	DABIT-005-BX
Marijuana	Duquenois-Levine	Presumptive identification of marijuana, hashish, THC	DABIT-006-BX
Screening	Liebermann's	Presumptive identification of LSD, MDMA, oxycodone, methamphetamine, and PMA (also known as "club drugs"). Includes neutralizer.	DABIT-007-BX
Opiates	Froehde	Presumptive identification of opiates, oxycodone, and heroin. Includes neutralizer.	DABIT-008-BX
Opium Alkaloids	Nitric Acid	Confirmatory test for differentiation between heroin and morphine. Includes neutralizer.	DABIT-009-BX
Ephedrine	Ephedrine	Presumptive identification for the presence of ephedrine and pseudoephedrine.	DABIT-010-BX
Barbiturates	Dille-Koppanyi	Presumptive identification of barbiturates	DABIT-011-BX
Valium	Zimmermann's	Presumptive identification of diazepam (Valium), ketamine and flunitrazepam (Rohypnol)	DABIT-012-BX
MDMA/MDA/MDEA	Gallic Acid	Presumptive identification of MDMA/MDA/MDEA	DABIT-013-BX
Mephedrone	Mephedrone Test 1	Presumptive identification of mephedrone, methamphetamine, MDMA, ephedrine...	DABIT-014-BX
	Mephedrone Test 2	Presumptive confirming test for mephedrone	

DABIT Type	Reagent name	Control - color with no sample	Heroin	Morphine	Methadone	Amphetamine	Methamphetamine	Cocaine	Crack	Marijuana/Hashish/THC	LSD	Papaverine	Oxy/ Hydrocodone	Thebaine	PCP	Buprenorphine	Ecstasy (MDMA)	Codeine	Mescaline	Opium	Ketamine	PMA	Psilocybin	Barbiturates	BZO (Valium)	Ephedrine	Mephedrone	MDPV	Methylphenidate HCl
-001	General screening		Red	Red	Red	Red	Red	Red	Red																				
-002	Special opiates		Red	Red	Red	Red	Red	Red	Red																				
-003	Amphetamine/Methadone		Yellow	Red	Red	Red	Red	Red	Red																				
-004	LSD		Yellow								Red																		
-005	Cocaine		Yellow																										
-006	Marijuana/hashish/TLC		Yellow							Red																			
-007	LSD/MDMA/Oxycodone/*		Yellow	Red	Red	Red	Red	Red	Red																				
-008	Opiates		Yellow	Red	Red	Red	Red	Red	Red																				
-009	Opium Alkaloids		Yellow	Red	Red	Red	Red	Red	Red																				
-010	Ephedrine/Pseudoephedrine		Yellow																										
-011	Barbiturates		Yellow																										
-012	Valium/Ketamine/Rohypnol		Yellow																										
-013	MDMA/MDA/MDEA		Yellow																										
-014	Mephedrone Reagent		Yellow	Red	Red	Red	Red	Red	Red																				
			Yellow	Red	Red	Red	Red	Red	Red																				

